



# YOSHIMURA

RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CA., 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

[www.yoshimura-rd.com](http://www.yoshimura-rd.com)

## YOSHIMURA PERFORMANCE HARDPARTS

**SUZUKI**



**2011-2012**

**GSX-R600/750**

**400BG116000**

YOSHIMURA SUSPENSION LINKAGE KIT

*\*Note: This product can ONLY be used with Yoshimura Full Exhaust Systems. The linkage geometry will not clear stock or slip-on exhaust systems.*

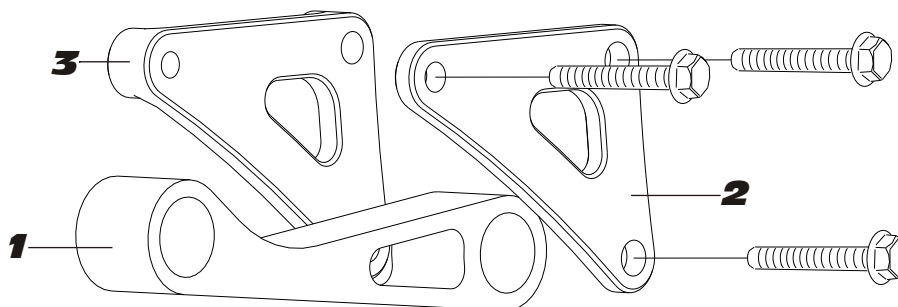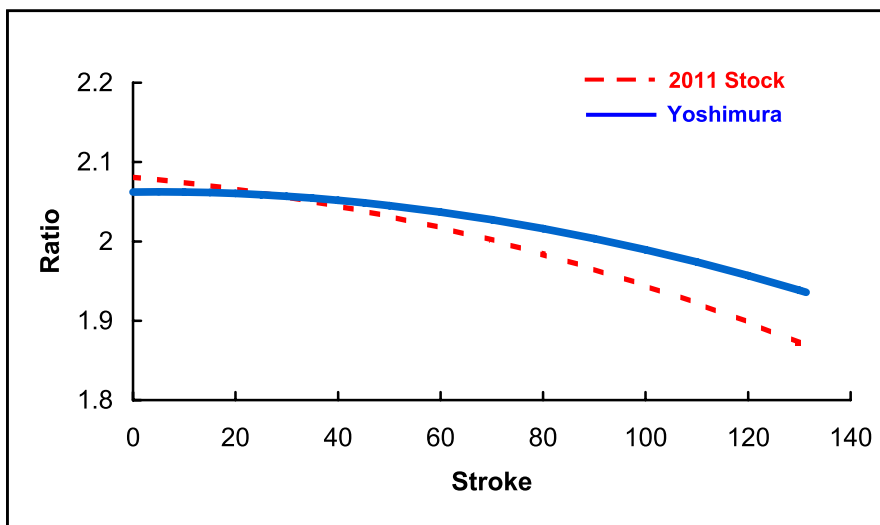

### Part List:

#	DESCRIPTION	QTY	PART #
1	GSXR600/750 '11 Control Link	1	YS0-CLINK
2	GSXR600/750 '11 Left Link Plate	1	YS6-LINK-L
3	GSXR600/750 '11 Right Link Plate	1	YS6-LINK-R
**	Yoshimura Sticker Kit Sheet	1	17029



**THIS PRODUCT IS DESIGNED FOR USE IN CLOSED COURSE RACING AND IS NOT INTENDED FOR HIGHWAY USE.**



**Caution:** Exhaust system can be extremely hot. Let motorcycle cool down before beginning installation. Always wear hand and eye protection and take precautionary measures to avoid injury.

**Note:** Read through all instructions before beginning installation.

## Tools Needed:

Metric Socket Set  
3/8" ratchet and extension  
Metric Combination Wrench Set  
Torque Wrench

## Installation Steps:

1. Lift bike up on rearstand.
2. Remove rear wheel.
3. Loosen all of the linkage bolts (Fig. 1)
4. Place a jackstand under each rearset peg (If using stock rearsets be sure to place jackstand under the non-folding part of the peg). Remove rearstand so swingarm can move freely.
5. Remove bolts from stock linkage and remove from bike.
6. Orientate Yoshimura side plates so the logos face outwards and right side up.
7. Remove stock bearing spacers from the stock linkage as they will be used with the Yoshimura linkage kit. Note the orientation of the bearing spacers and washers.
8. Install stock linkage bearing spacers onto Yoshimura Control Link.  
  
*Note: Inspect bearings to make sure they are clean and free from debris. Lightly lubricate with grease.*
9. Attach the Yoshimura control link to the side plates using the stock bolt. (Note: The Yoshimura logo on the control link should be closer towards the front of the bike.)
10. Install the Yoshimura suspension linkage assembly using stock bolts, washers, and bearing spacers. Do not torque at this time.
11. Lift bike up on rearstand and remove jack stands.
12. Torque the 4 linkage bolts to factory specifications.
12. Reinstall rear wheel. Torque to factory specifications.
13. Check all clearances. Make sure that suspension is operating smoothly and is free from any binding. If any problem is found, please carefully follow through the installation steps again. If problem still persists, please call Yoshimura technical department at (800)634-9166 / in CA (909)628-4722.

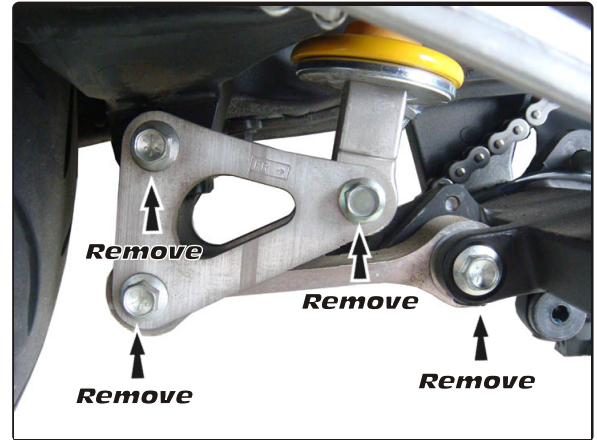


Fig. 1

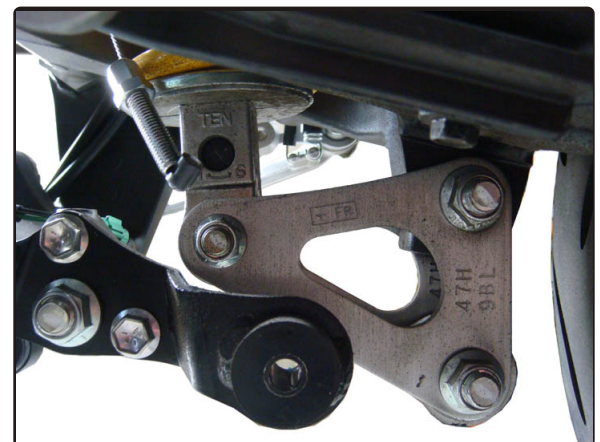


Fig. 2